


Wellis®

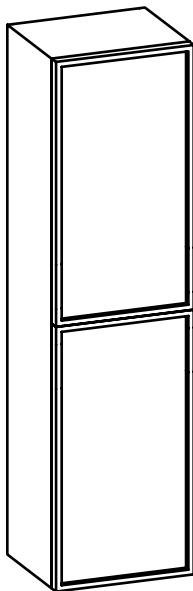

EN

Tripoli Tall Cabinet

Installation manual

DE

Tripoli Turmschrank

Installationsanleitung

FR

Tripoli cabinet de tour

Installation Manuel

HU

Tripoli magas szekrény

Telepítési kézikönyv

RO

Dulap înalt Tripoli

Manual de instalare

| EN |

Tools required for installation

| DE |

Werkzeuge, die für die Installation benötigt werden

| FR |

Outils nécessaires à l'installation

| HU |

A telepítéshez szükséges szerszámok

| RO |

Instrumentele necesare pentru instalare



Electric drill



Drill bit (Ø 8/Ø 5)



Tape measure (3m~5m)



Silicone



Pencil



Screwdriver

"A" set




B

C

A



"B" set




B

C


D

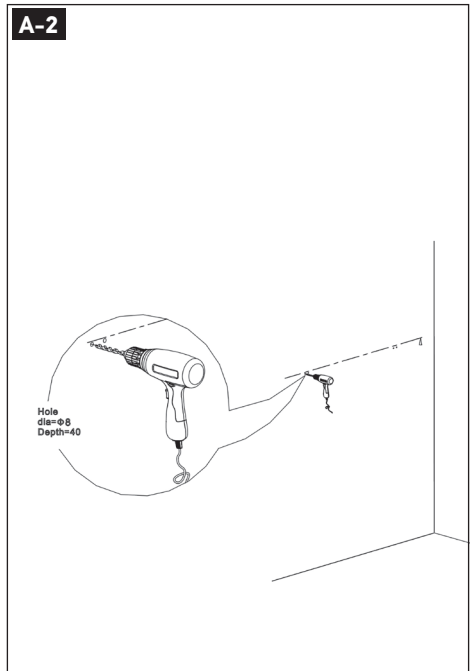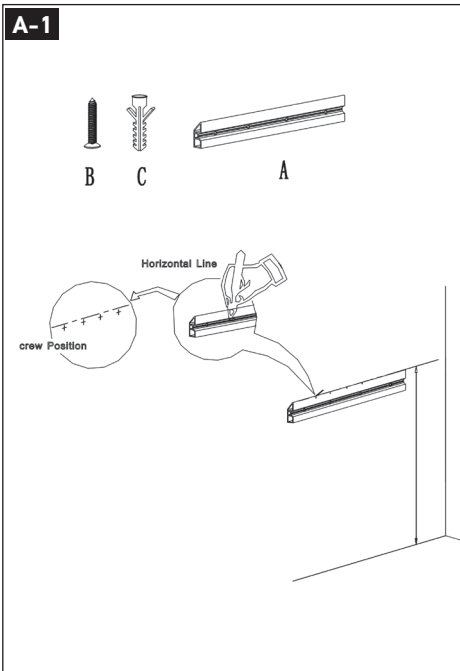


A-3

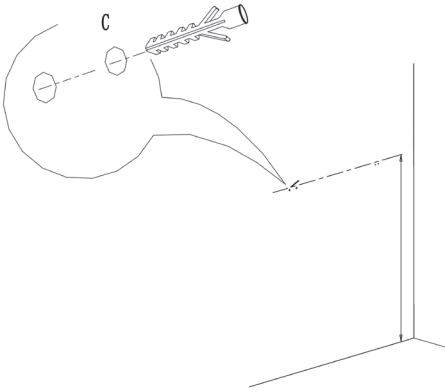

A-4

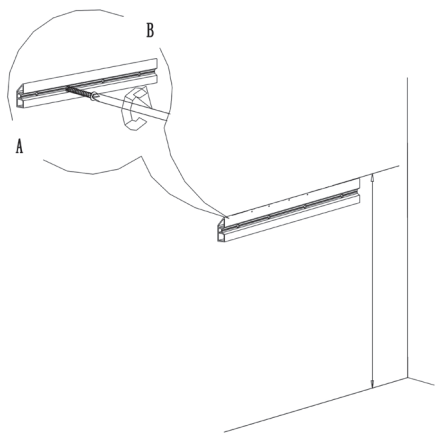

B-1

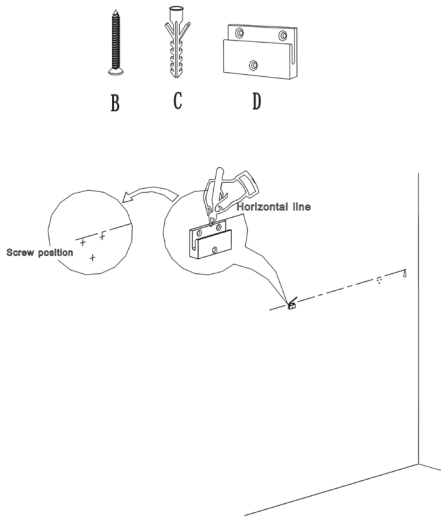

B-2

