


Wellis®

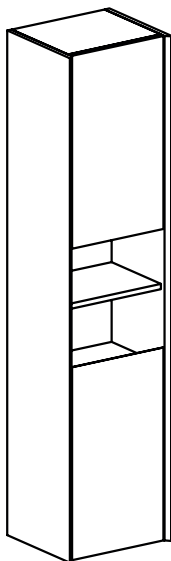

EN

Tenebra Tall Cabinet

Installation manual

DE

Tenebra Turmschrank

Installationsanleitung

FR

Tenebra cabinet de tour

Installation Manuel

HU

Tenebra magas szekrény

Telepítési kézikönyv

RO

Dulap înalt Tenebra

Manual de instalare

| EN |

Tools required for installation

| DE |

Werkzeuge, die für die Installation benötigt werden

| FR |

Outils nécessaires à l'installation

| HU |

A telepítéshez szükséges szerszámok

| RO |

Instrumentele necesare pentru instalare



Electric drill



Drill bit (Ø 8/Ø 5)



Tape measure (3m~5m)



Silicone



Pencil



Screwdriver

"A" set



B



C



A

"B" set





B






C



D

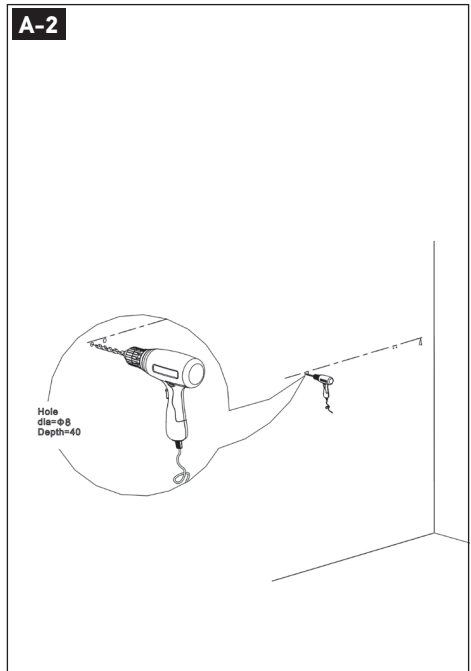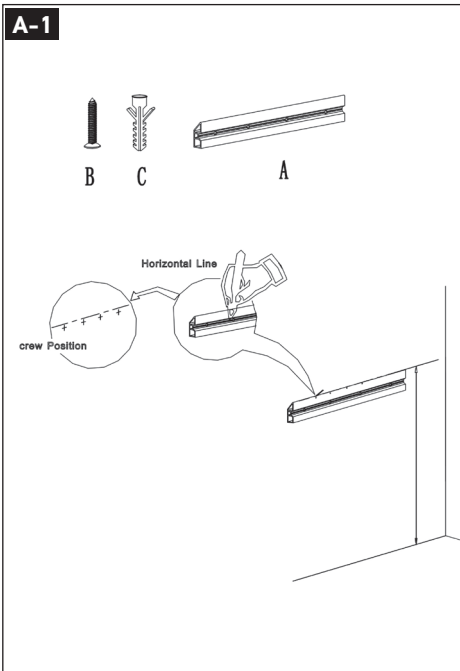

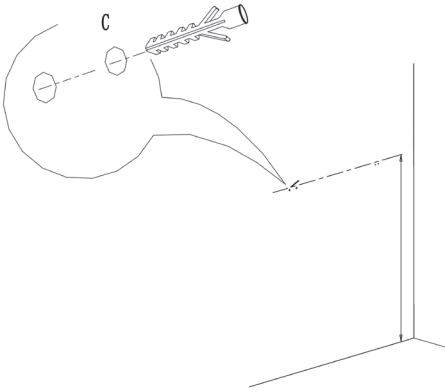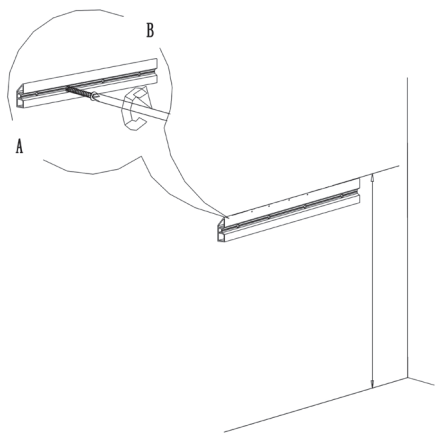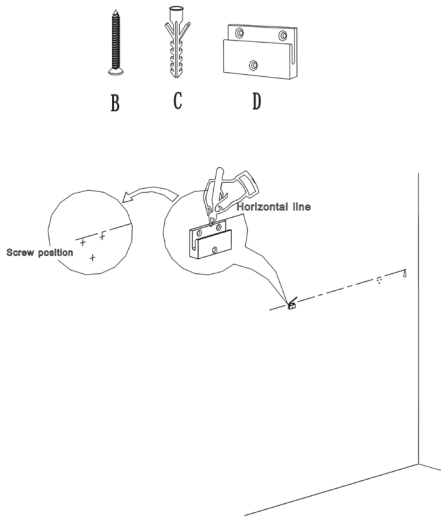A-3**A-4****B-1****B-2**